

The default output mode is auto mode.

Please following the procedure to change to "Print-output" mode.

Press and hold the COU key until the screen displays CO-OFF, and then press the tare point to C5-0. Click COU again to select to enter C5-2 mode, and finally click Tare until the program ends and return to zero.

RS232 Interface

Balance (9 pins)                      Printer/PC (9 pins)  
RXD(Input) 2 ----- 3  
(Output) 3 ----- 2  
(Ground) 5 ----- 5

- The default Baud Rate is 9600 bps
- The data format is: 10 bits; 0 as start bit, 1 as stop bit, 8 digits (ASCII code)
- No odd and even numbers adjustments

Data output format:

1	2	3	4	5	6	7	8
Type	Space	Space or *	±	Data	Data	Data	Data
9	10	11	12	13	14	15	16
Data	Data or dot	Data or dot	Data	Unit 1	Unit 2	End	Return

Reference video

[https://www.youtube.com/watch?v=OastbgH\\_hMo](https://www.youtube.com/watch?v=OastbgH_hMo)